
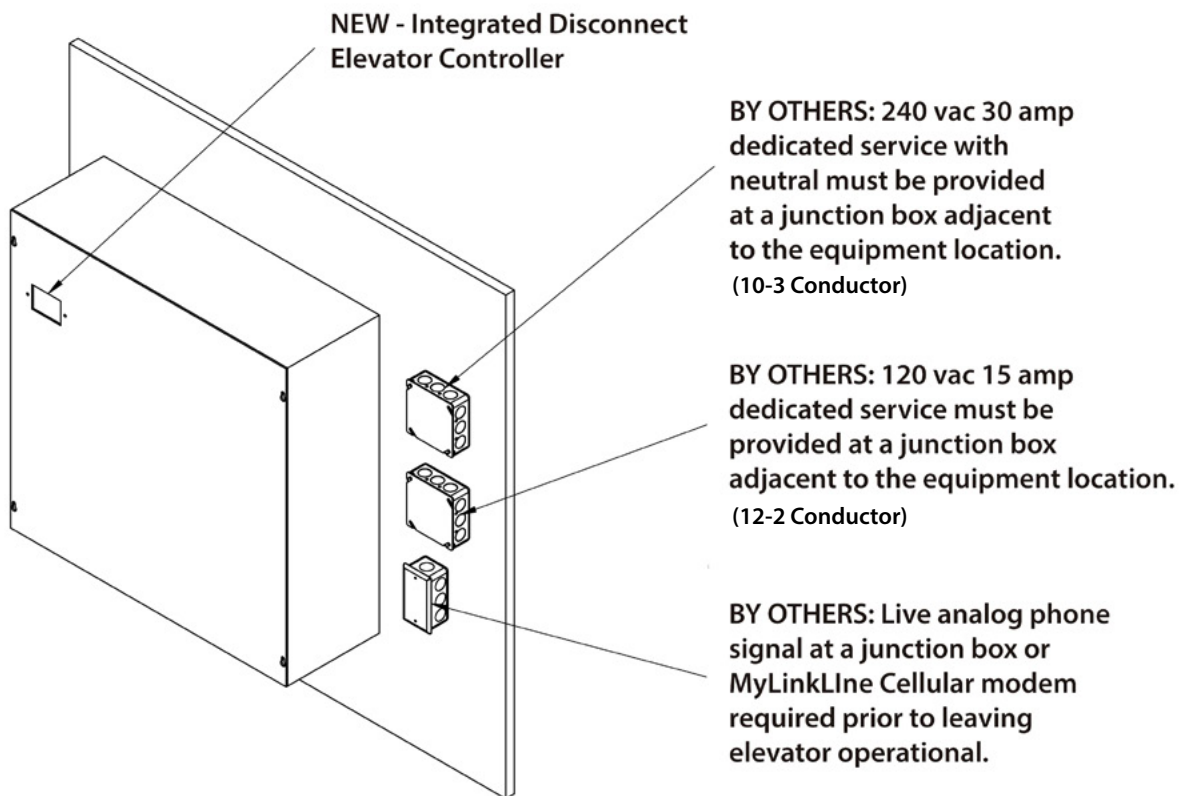


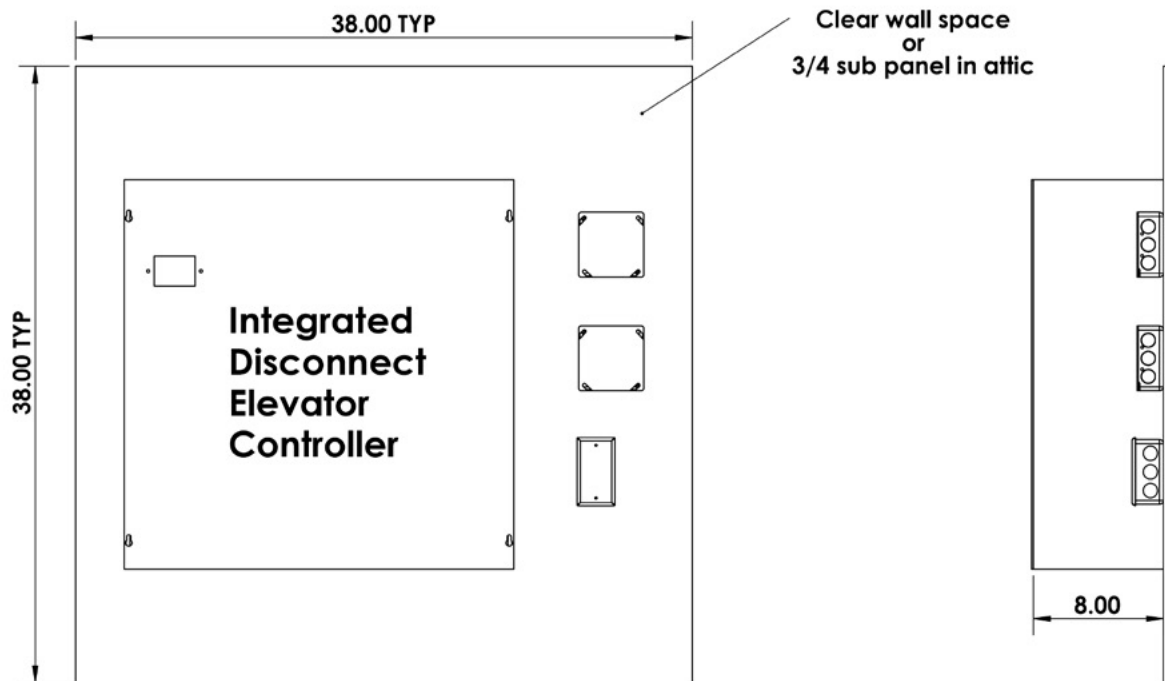

NOTE: Access must be provided to a motor located at the top of the shaft.

PROPRIETARY AND CONFIDENTIAL

The information contained in this drawing is the sole property of Southeast Elevator. Any reproduction in part or as a whole without the written permission of Southeast Elevator is prohibited.

855-624-8888
info@seelevator.com
seelevator.com